



Middle "C" – MIDI Note # 60 (Five-Octave Keyboard)

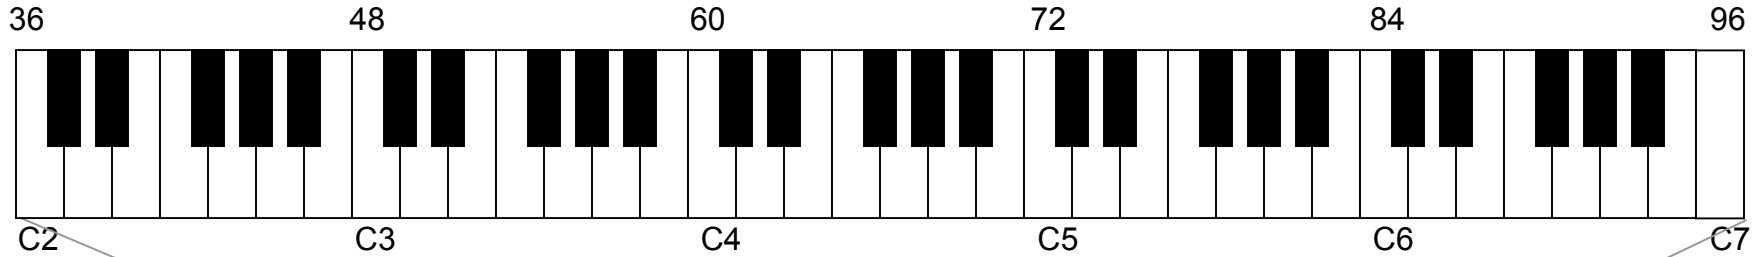

Full MIDI Note Range

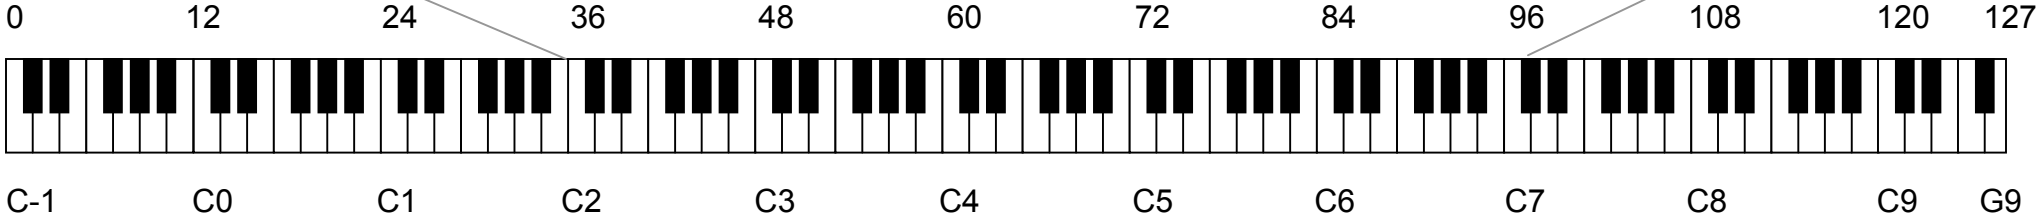

**Roland
PC-200 MK II**

[4-Oct. MIDI Range: C2(36) - C6(84)/Shift-L:C1 - C5/H:C3 - C7]



**Roland
Juno-106**

[5-Octave Keyboard Range: C2 (36) to C7 (96) / (+/- 1 Octave Transposed)]



**Roland
KR-500**

[76-Note Keyboard Range: E1 (28) to G7 (103) / (A0(21)-C8(108) Transposed)]



**Technics
PR-305**

[88-Note Piano Keyboard Range: A0 (21) to C8 (108) / Transposed: (E0 (16) to F#8 (114))]

